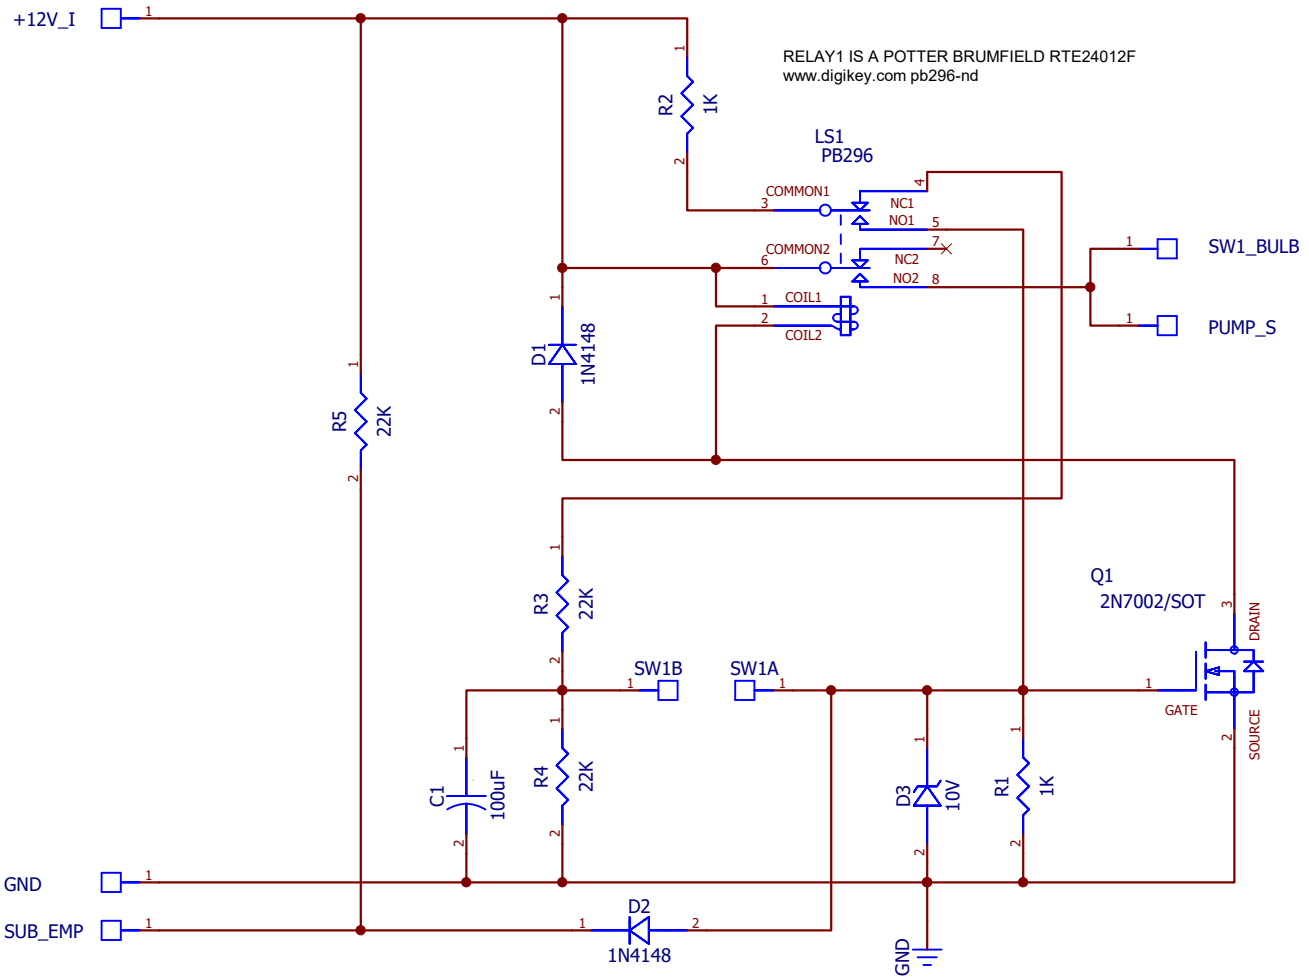

NOTE 1: SW1 IS THE MOMENTARY CONTACT FUEL TRANSFER SWITCH PRESS ONCE TO START THE PUMP, PRESS AGAIN TO STOP

NOTE 2: SUB_TANK _EMPTY IS FROM THE AUX TANK WHEN IT IS EMPTY (GOES LOW)

NOTE 3: +12V_IGN IS ACTIVE WHEN THE IGNITION SWITCH IS IN THE ON POSITION

NOTE 4: PUMP_SOLENOID_+VE PROVIDES 12V TO THE PUMP AND S OLENOID AFTER SW1 IS 1ST DEPRESSED SW1_TRANSFER_LIGHT PROVIDE S 12V TO ILLUMINATE THE TRANSFER LIGHT

NOTE 5: WITH THE SPECIFIED COMPONENT VALUES THE ON/OFF CAN'T BE CYCLED FASTER THAN ONCE EVER FEW SECONDS

2001-2025 TaskLED		
DESC:	Subtank Transfer Controller	REV 2.0
SIZE	DWG NO:	XFER